

## DI-LB604 Atualização de Firmware


1. Acesse as configurações do Internet Server através do navegador de Internet:

Na barra de endereços do navegador digite: **192.168.0.1** e pressione a tecla **ENTER**. Abrirá uma caixa de texto solicitando nome de usuário e senha.

Nome de usuário: **admin**

Senha: **(sem preenchimento)**

Após digitado nome de usuário e senha, clique no botão **OK**.

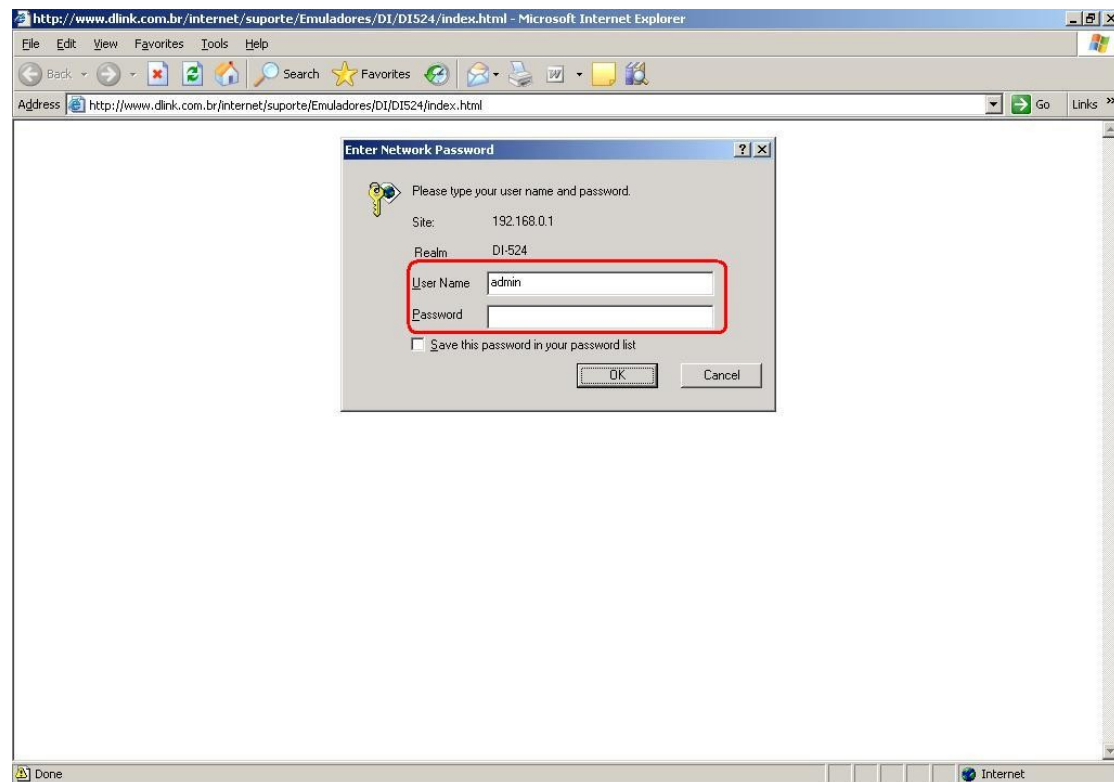



2. O navegador abrirá a tela de configurações do Internet Server DI-LB604.

Clique na guia **Tools**.

The screenshot shows the web interface for the D-Link DI-LB604 Dual-WAN Load Balancing Router. The top navigation bar includes 'Home', 'Advanced', 'Tools' (highlighted with a red box), 'Status', and 'Help'. On the left sidebar, there are buttons for 'Wizard', 'WAN', 'LAN', 'DHCP', and 'Load Balance'. The main content area is titled 'Setup Wizard' and contains the following text: 'The DI-LB604 is a Dual WAN Load Balancing Router ideal for home networking and small business networking. The setup wizard will guide you to configure the DI-LB604 to connect to your ISP (Internet Service Provider). The DI-LB604's easy setup will allow you to have Internet access within minutes. Please follow the setup wizard step by step to configure the DI-LB604.' Below this text is a 'Run Wizard' button. A 'Help' icon is located in the bottom right corner of the main content area.



3. Será exibida a tela de configurações administrativa do Internet Server.

Clique no botão **Firmware**, localizado ao lado esquerdo da tela.

The screenshot shows the D-Link Express Ethernet web interface for a DI-LB604 Dual-WAN Load Balancing Router. The interface has a blue header with the D-Link logo and the product name. Below the header is a navigation menu with tabs for Home, Advanced, Tools, Status, and Help. The Tools tab is selected. On the left side, there is a vertical menu with buttons for Admin, Time, System, Firmware (highlighted with a red box), Email Alert, SNMP, DDNS, UPNP, and Misc. The main content area is titled "Administrator Settings" and contains the following fields:

- Administrator(The Login Name is "admin")
- New Password: [text input]
- Confirm Password: [text input]
- Remote Management section:
  - Remote Upgrade:  Enable
  - Remote Setup:  Enable
  - Allowed Remote IP: [0.0.0.0] ~ [0.0.0.0]
  - Access Port: [8080]


At the bottom right of the main content area, there are three buttons: Apply (with a green checkmark icon), Cancel (with a yellow X icon), and Help (with a blue question mark icon).



4. Na tela a seguir clique no botão **Browse...** para indicar a localização do arquivo de atualização.

The screenshot shows the web management interface for a D-Link Express Ethernet Network router. The page title is "Express Ethernet Network" and the model is "DI-LB604 Dual-WAN Load Balancing Router". The navigation tabs are "Home", "Advanced", "Tools", "Status", and "Help", with "Tools" currently selected. On the left sidebar, there are buttons for "Admin", "Time", "System", "Firmware" (highlighted in yellow), "Email Alert", "SNMP", "DDNS", "UPNP", and "Misc.". The main content area is titled "Upgrade Firmware" and contains a login form with "User Name : admin" and a "Password :" field. Below the login form, there is a section for "Upgrade Software From Local Hard Drive" with a text input field and a "Browse..." button highlighted with a red box. An "Upgrade" button is located below the input field. A "Help" icon is visible in the bottom right corner of the main content area.

5. Realizado o procedimento anterior, selecione o arquivo de atualização e clique no botão **Abrir**.

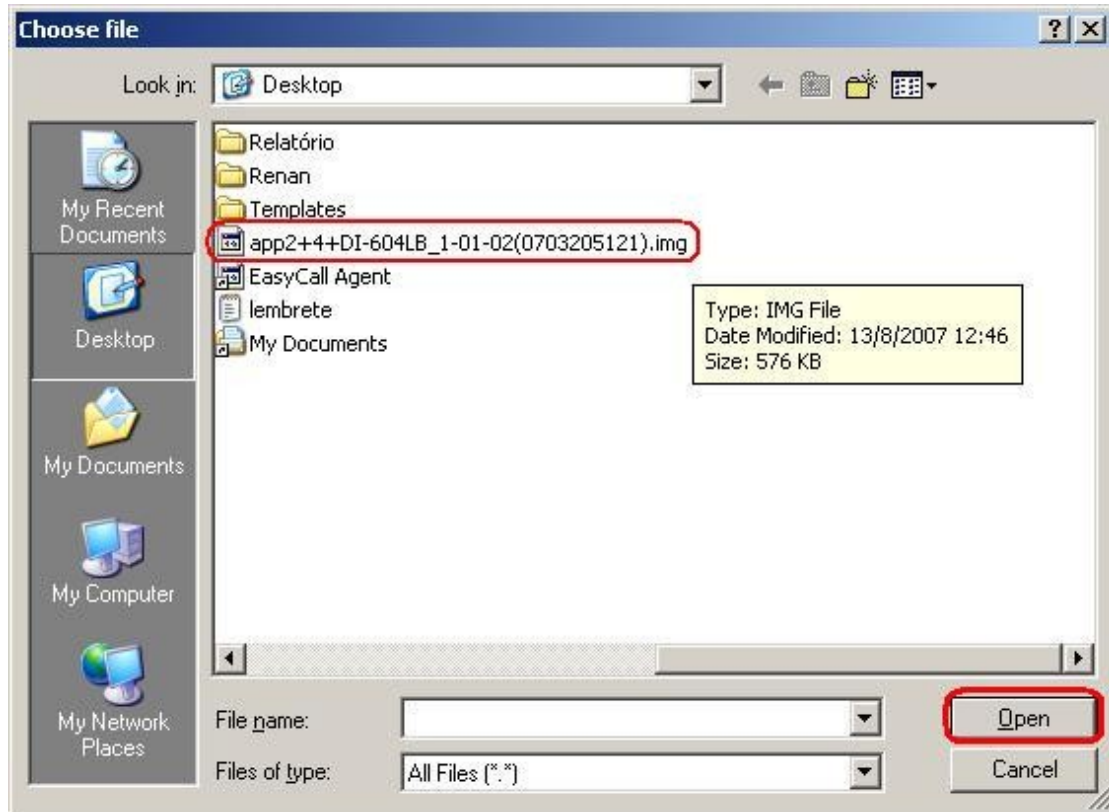



6. Clique no botão **Upgrade** para atualizar a firmware através do arquivo selecionado.

The screenshot shows the web management interface for a D-Link Express EtherNetwork DI-L8604 Dual-WAN Load Balancing Router. The interface has a blue header with the D-Link logo and product name. Below the header is a navigation menu with tabs for Home, Advanced, Tools (highlighted in yellow), Status, and Help. On the left side, there is a vertical sidebar with buttons for Admin, Time, System, Firmware (highlighted in yellow), Email Alert, SNMP, DDNS, UPNP, and Misc. The main content area is titled "Upgrade Firmware" and contains a login form with "User Name: admin" and a "Password:" field. Below the login form, it says "Upgrade Software From Local Hard Drive" and shows a file path "C:\Documents and Settings\admin\_jsan" with a "Browse..." button. A red box highlights the "Upgrade" button. A "Help" icon is visible on the right side of the main content area.

7. A atualização foi realizada com sucesso.